



## **Anchorware® Reusables AW848**

**8" Round Container 48 oz  
Microwavable Clear Smoothwall**

**8" Round Container 48 oz  
Microwavable Clear Smoothwall**

---



## **Anchorware® Reusables AWL6**

**7" Round Lid Microwavable Clear Flat  
Push-Button Close**

**Fits AW616, AW632**

**7" Round Lid  
Microwavable Clear Flat Push-Button Close**

**Fits AW616, AW632**

---



## **Anchorware® Reusables AW7725**

**7" Square Deep Container 25 oz  
Microwavable Clear Smoothwall**

**7" Square Deep Container 25 oz  
Microwavable Clear Smoothwall**

---



**Anchorware® Reusables  
AW7742**

**7" Square Deep Container 42 oz  
Microwavable Clear Smoothwall**

**7" Square Deep Container 42 oz  
Microwavable Clear Smoothwall**

---



**Anchorware® Reusables  
AWL77**

**7" Square Lid Microwavable Clear Flat  
Push-Button Close**

**Fits AW7725, AW7742**

**7" Square Lid  
Microwavable Clear Flat Push-Button Close**

**Fits AW7725, AW7742**

---



## **Anchorware® Reusables AW9595**

**9.5" Square Deep Container 104 oz  
Microwavable Clear Smoothwall**

**9.5" Square Deep Container 104 oz  
Microwavable Clear Smoothwall**

---



## **Anchorware® Reusables AWL95**

**9.5" Square Lid Microwavable Clear  
Flat Push-Button Close**

**Fits AW9595**

**9.5" Square Lid  
Microwavable Clear Flat Push-Button Close**

**Fits AW9595**

---



## **Anchorware® Reusables AW9632**

**9" x 6.5" Container 32 oz  
Microwavable Clear Smoothwall**

**9" x 6.5" Container 32 oz**  
**Microwavable Clear Smoothwall**

---



**Anchorware® Reusables**  
**AW9664**

**9" x 6.5" Deep Container 64 oz**  
**Microwavable Clear Smoothwall**

**9" x 6.5" Deep Container 64 oz**  
**Microwavable Clear Smoothwall**

---



**Anchorware® Reusables**  
**AWL96**

**9" x 6.5" Lid Microwavable Clear Flat**  
**Push-Button Close**

**Fits AW9632, AW9664**

**9" x 6.5" Lid**  
**Microwavable Clear Flat Push-Button Close**

**Fits AW9632, AW9664**

---



## **Anchorware® Reusables AW1107**

**11" x 7" Container 80 oz Microwavable  
Clear Smoothwall**

**11" x 7" Container 80 oz  
Microwavable Clear Smoothwall**

---



## **Anchorware® Reusables AWL117**

**11" x 7" Lid Microwavable Clear Flat  
Push-Button Close**

**Fits AW1107**

**11" x 7" Lid  
Microwavable Clear Flat Push-Button Close**

**Fits AW1107**

---



## **Anchorware® Reusables AW616**

**6" Round Container 16 oz  
Microwavable Clear Smoothwall**

**6" Round Container 16 oz  
Microwavable Clear Smoothwall**

---



**Anchorware® Reusables  
AW632**

**6" Round Deep Container 32 oz  
Microwavable Clear Smoothwall**

**6" Round Deep Container 32 oz  
Microwavable Clear Smoothwall**

---



**Anchorware® Reusables  
AWL8**

**8" Round Lid Microwavable Clear Flat  
Push-Button Close**

**Fits AW848**

**8" Round Lid  
Microwavable Clear Flat Push-Button Close**

**Fits AW848**